
### Framing Information: 98H Corner (RS/LS) (Screen & Double Glass)

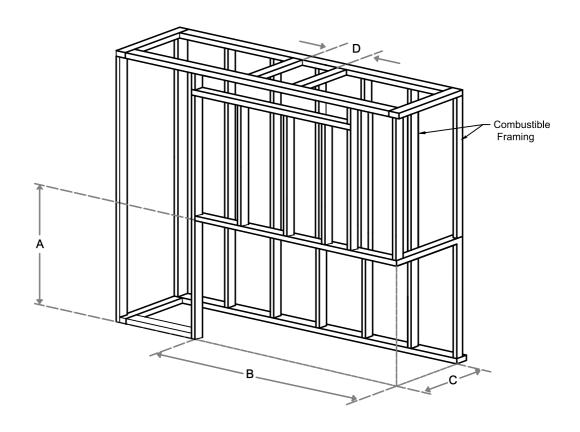

## Framing Dimensions



Model	А	В	С	D	
98H RS/LS	41 <sup>1</sup> ½6"	104 ½"		Refer to Vent Manufacturer's Firestop Dimensions	

Note .1 :Drawings are not to Scale

2. All dimensions in inches

3. No weight can be transferred to the fireplace. ALL FRAMING MUST BE SELF-SUPPORTED.


# Framing Information: 98H Corner (RS/LS) (Screen & Double Glass) **Framing Details** Nailing flanges fold up and connect to the framing. ALL FRAMING MUST BE SELF-SUPPORTED. The fireplace must not bear any weight. Heat Release Heat Release 5/8" Type X 5/8" Type X Drywall on Framing Exterior Drywall on Framing Exterior Combustible Framing Air Intake ( required for double glass only) Add drywall nailer as needed. **Elevation View** Section View Top View The valve can be moved 36" from the center of the fireplace in any direction


- Note .1 :Drawings are not to Scale
  - 2. All dimensions in inches
  - 3. No weight can be transferred to the fireplace. ALL FRAMING MUST BE SELF-SUPPORTED.

# Framing Information: 98H Corner (RS/LS) (Screen & Double Glass)




#### **Fireplace Dimensions**

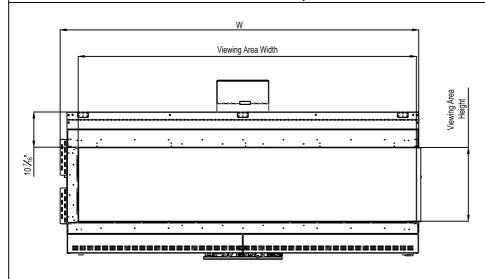


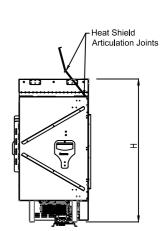

Front View

Side View

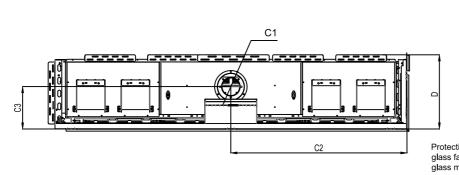

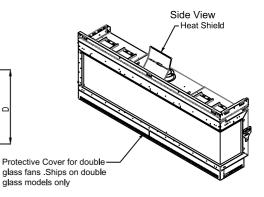

Top View

Model	(H)	(W)	·	СЗ	Viewing Area			
IVIOGCI	Height	Width		_	02	00	Front	Side
98H RS/LS	41 <sup>1</sup> ½6"	104 ½"	21 %"	7 %"	51 1/4"	12 ½ <sub>16</sub> "	98½" W X 21 ½" H	14 <sup>13</sup> / <sub>16</sub> " W X 21 <sup>5</sup> / <sub>8</sub> " H

Note: 1. Drawings are not to Scale

2. All dimensions in inches