
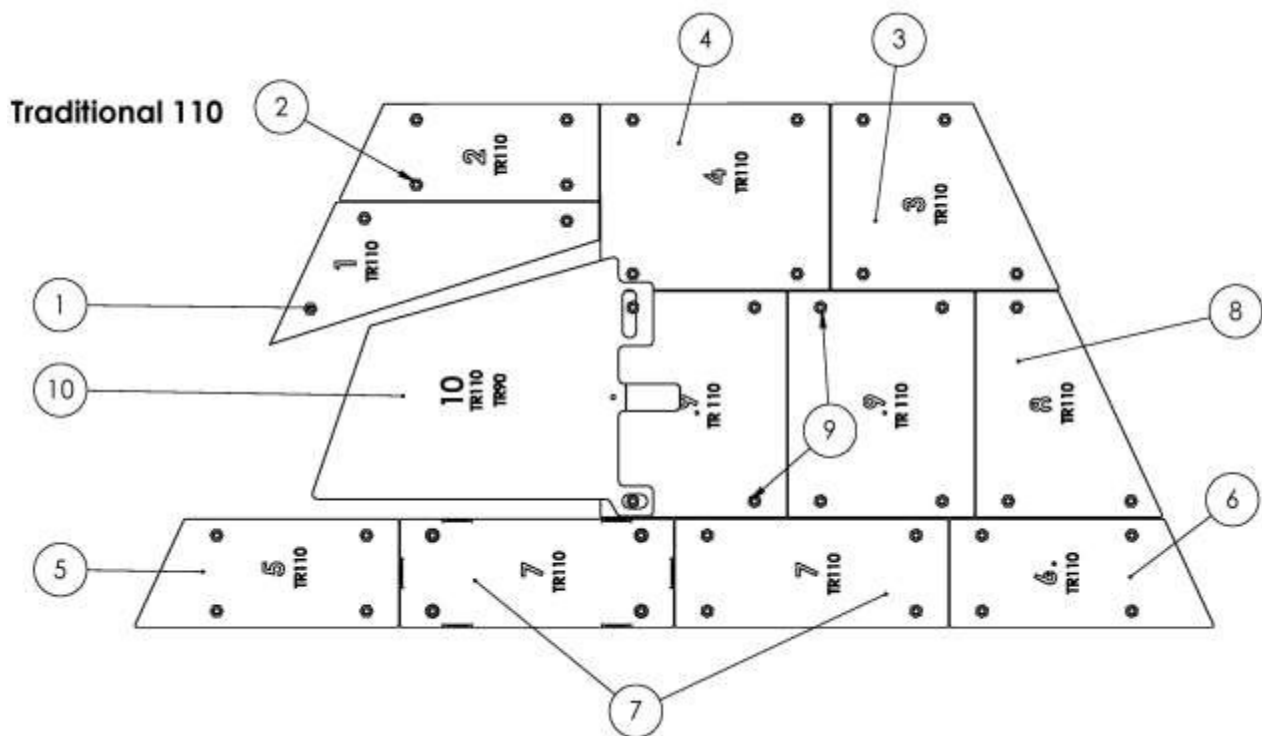


RETROFIT KIT


Installation Instructions for Traditional 90 & 110 Series

The following parts are included in this kit:

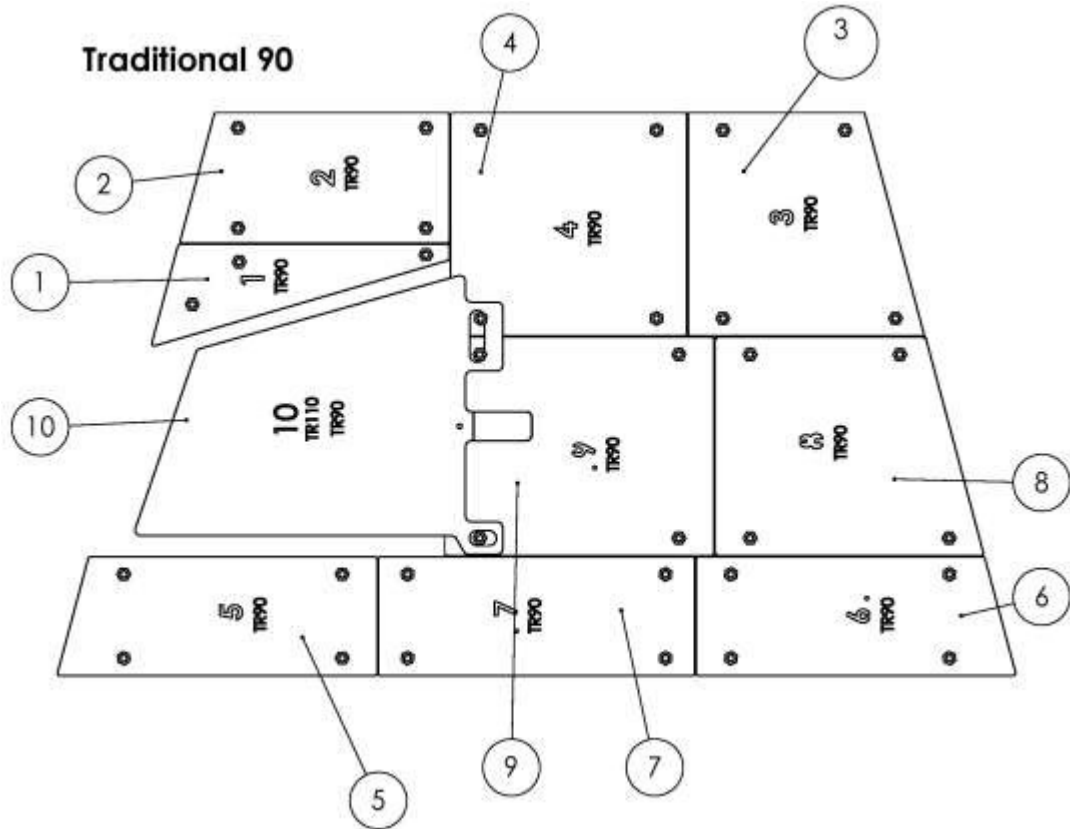


Traditional 90			Traditional 110		
Item #	Part Number	Qty	Item #	Part Number	Qty
1	TRD90RF01	1	1	TRD110RF01	1
2	TRD90RF02	1	2	TRD110RF02	1
3	TRD90RF03	1	3	TRD110RF03	1
4	TRD90RF04	1	4	TRD110RF04	1
5	TRD90RF05	1	5	TRD110RF05	1
6	TRD90RF06	1	6	TRD110RF06	1
7	TRD90RF07	1	7	TRD110RF07	2
8	TRD90RF08	1	8	TRD110RF08	1
9	TRD90RF09	1	9	TRD110RF09	2
10	TRD90RF10A	1	10	TRD90RF10A	1

For units installed with reflective panels, Floor Brick (2 pieces) and one bag of Charcoals will be provided.

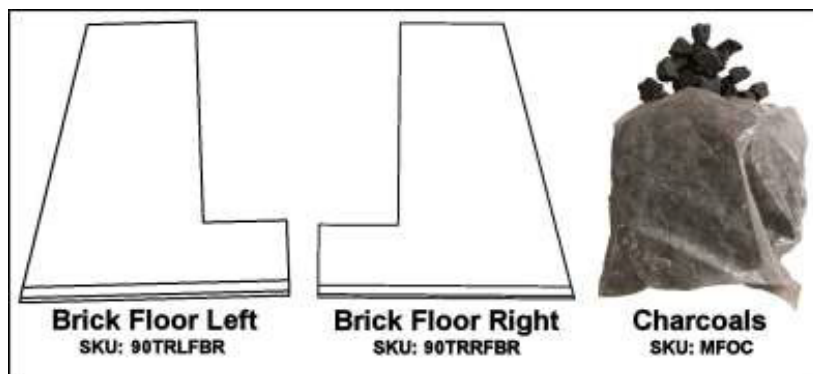

Traditional 90

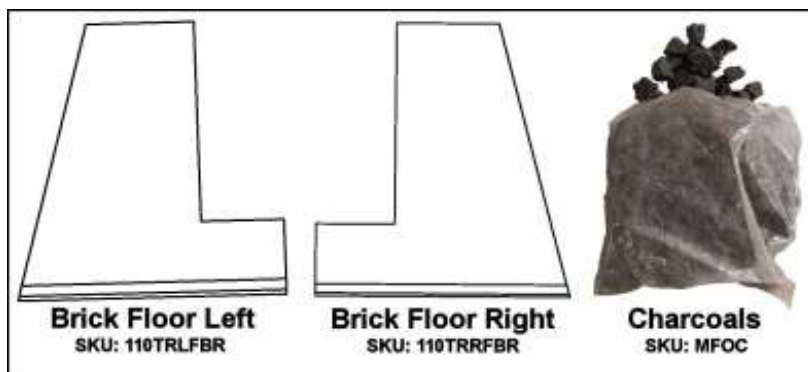

Traditional 110

Retrofit Kit Installation Instructions:

1. Remove the heat barrier screen.
2. Remove the ceramic glass.
3. Remove media.
4. Disconnect the burner base from the floor of the fireplace to allow access to the floor under the unit.
 - a. To remove the burner base, remove the front 2 screws using a 10mm wrench shown in Figure 1.
 - b. Set aside the bracket that the front 2 screws were attaching, you will need to reattach this bracket after Retrofit installation.
 - c. Remove 4 screws on the back of the burner base and 2 screws from the front of the burner base using a 10mm wrench as shown in Figure 2.
 - d. Pull the burner up, and place to the side to access the space below. **Use caution when placing burner to the side to not damage the refractory or reflective panels.*



Figure 1


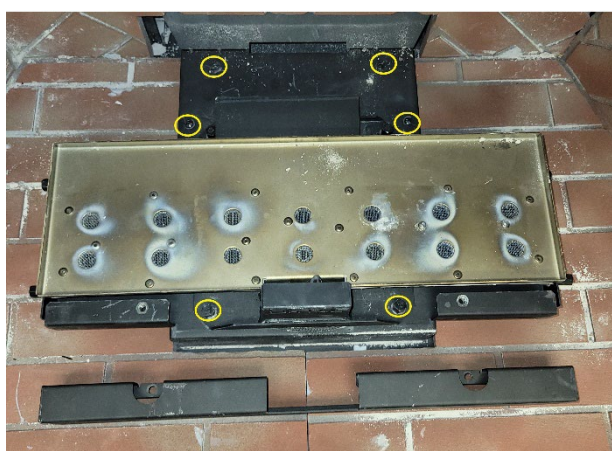


Figure 2


5. Start placing the Retrofit kit by inserting the parts through the burner opening, following the numbers engraved on each part, see images below:



6. After parts labeled 1 through 9 (9 pieces for TR90 & 11 pieces for TR110) are placed, insert part number 10 and use a self-tapping screw to attach it to part number 9 as shown in the following photos:

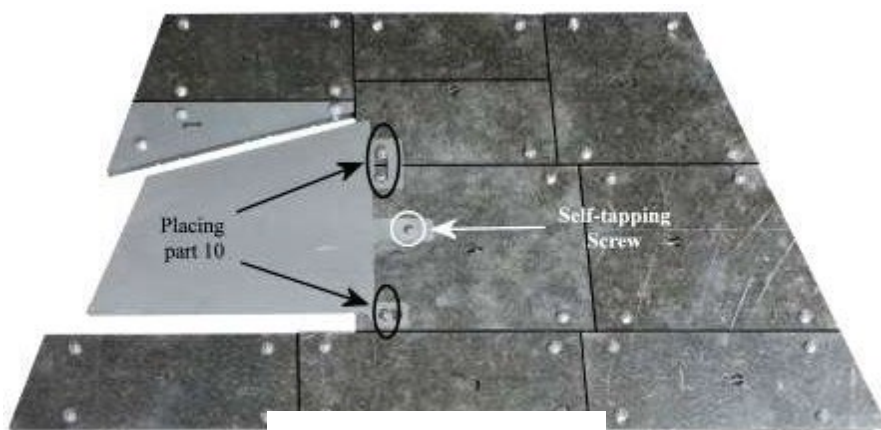

Traditional 90 Fit Together

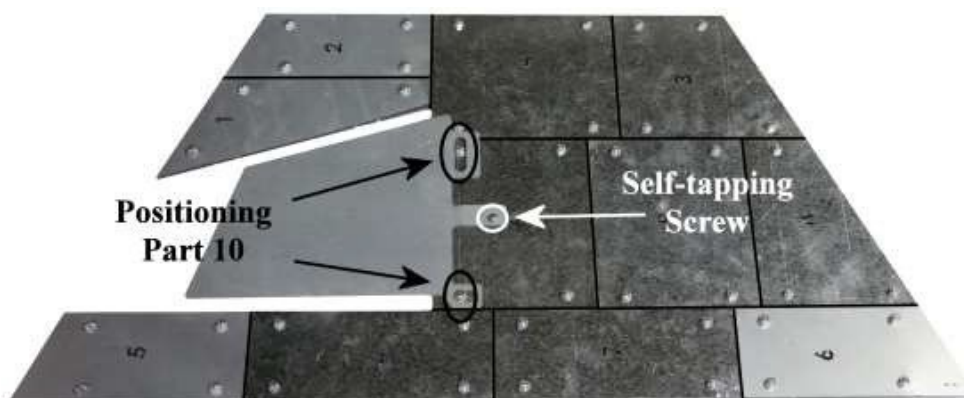

Traditional 110 Fit Together



Final Position of Part Number 10

7. Reinstall burner repeating steps 4.a – 4.d in reverse order.

Note: For units with Reflective Panels, install the 2 Floor Brick pieces on the unit floor adding the charcoal as desired.

8. Reinstall media, ceramic glass, and heat barrier screen.